 




Polaroid S10 Speaker Dissassembly

prerequisite only

Written By: Christofer

 
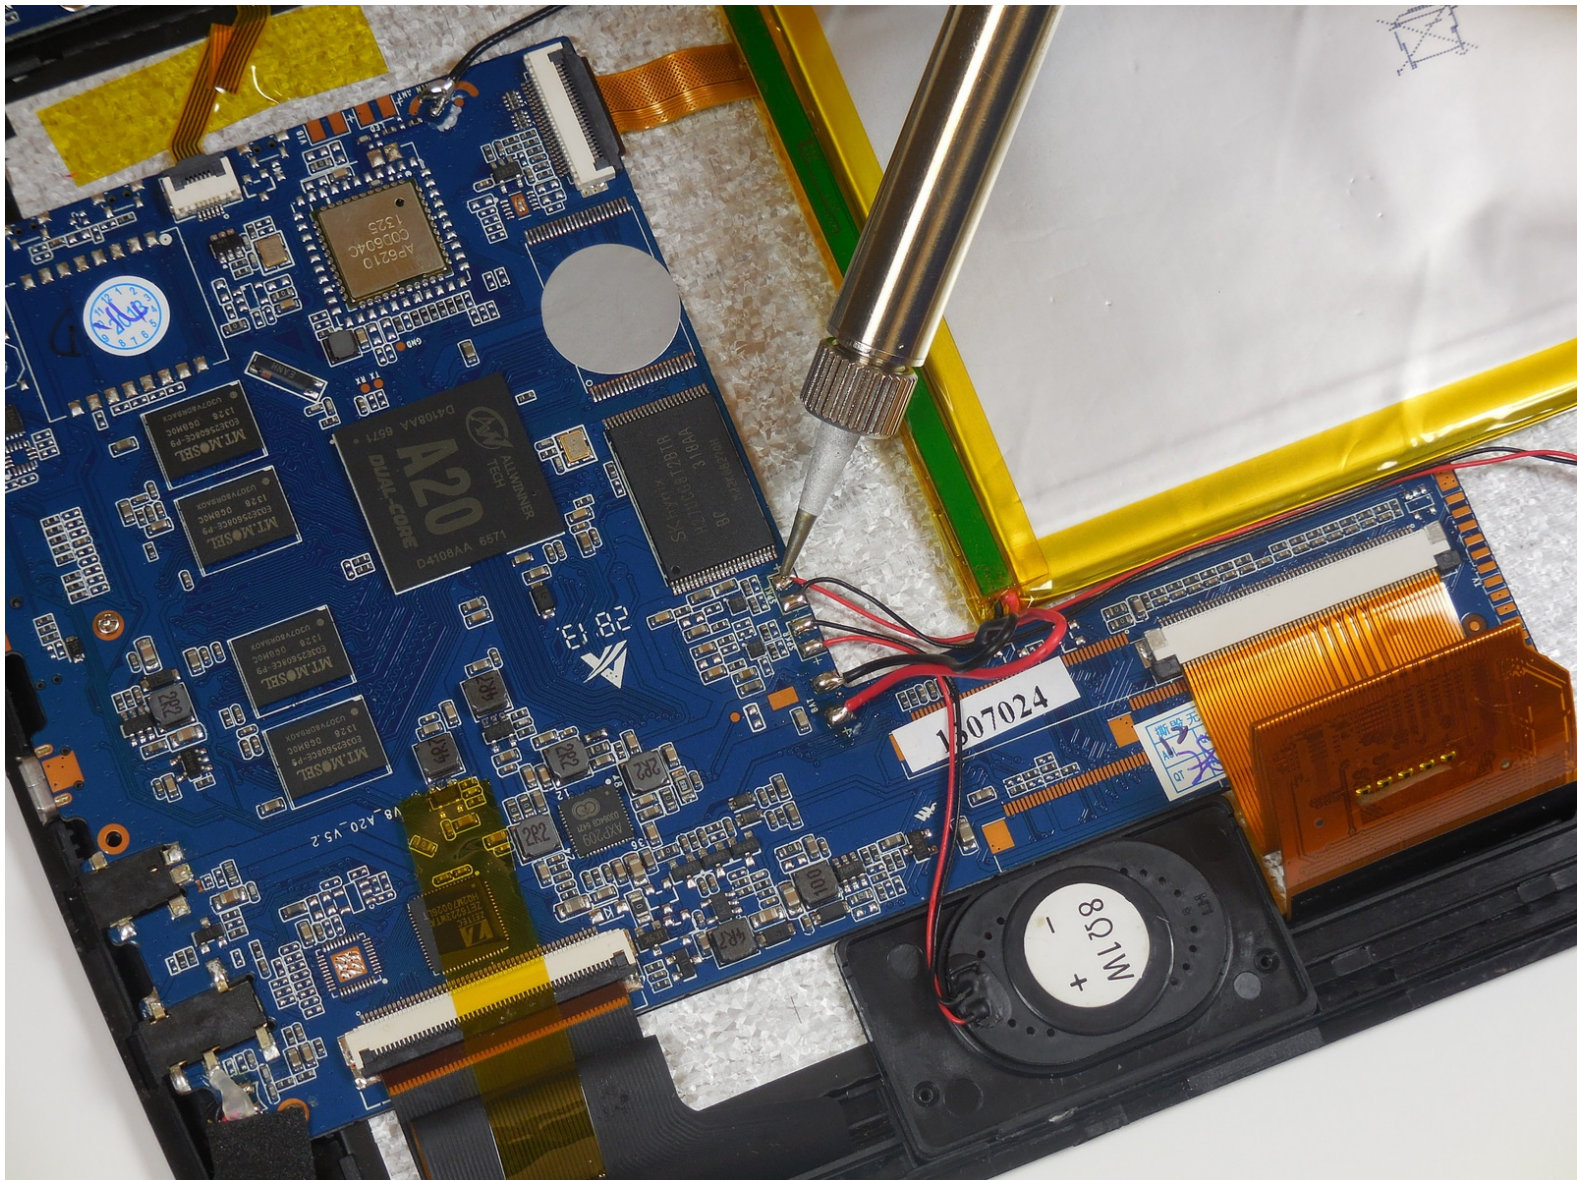 




TOOLS:

- [Soldering Station](#) (1)
-

Step 1 — Desoldering the Speakers

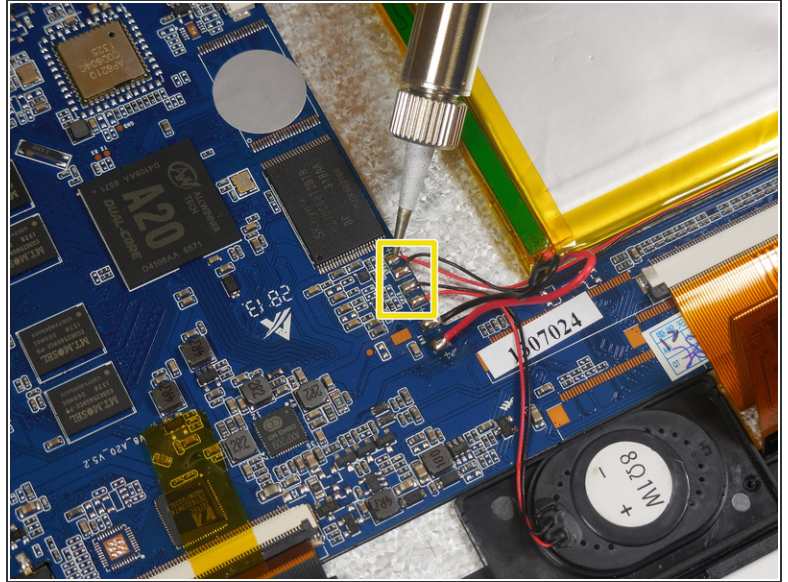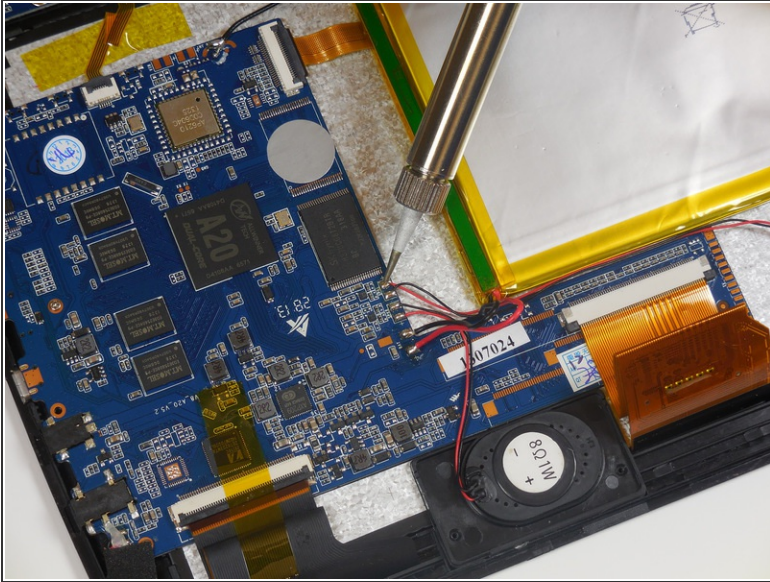

- Carefully desolder the 4 connections of the speakers.
- ⚠ Do not touch the soldering iron to the motherboard or LCD screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-11 06:37:51 PM.